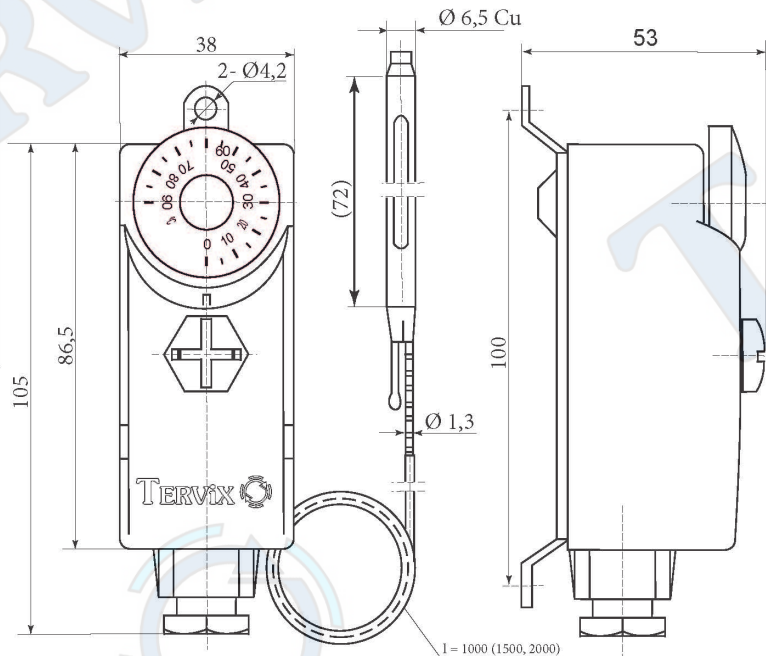
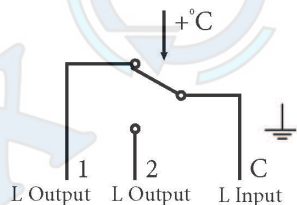


General Performances

Temperature range	0/90°C
Differential	5°C
Liquid filled sensing element	Ø6.5x73 Rame / Cu
Sensing element max. temp. resistance	110°C
Bare capillary	1000 mm, st. steel
Thermostat pin rotation	270°
Cover material	ABS UL94 V0
Base material	galvanized steel
Protection grade	IP40
Contacts rating	16(4)A 250B~ 6(1)A 400B~

**Electrical circuit
(wiring diagram)****Electrical connection**



Open the thermostat by removing the dial (1) and loosening the large plastic screw (2). Remove the housing cover. The 4 cable clamps which are now visible are to be wired as follows:

- Clamps C and 1 = opener
The thermostat opens under increasing temperature and closes in the case of sinking temperature. (e.g. function = "heating")
- Clamps C and 2 = opener
The thermostat closes under increasing temperature and opens in the case of sinking temperature. (e.g. function = "cooling")
- Clamp — Earth

The installation may only be carried out by professional installers in accordance with the connection diagram.

Загальні характеристики

Температурний діапазон	0/90°C
Точність регулювання	5°C
Заповнений рідиною елемент регулювання	Ø6.5x73 Rame/Cu
Макс. доп. темп. для елемента регулювання	110°C
Капіляр	1000 мм. нерж. сталь
Кут повороту регульовальної ручки	270°
Матеріал корпусу	ABS UL94 V0
Матеріал основи термостату	Оцинкована сталь
Ступінь захисту	IP40
Номинальна потужність	16(4)A 250B~ 6(1)A 400B~

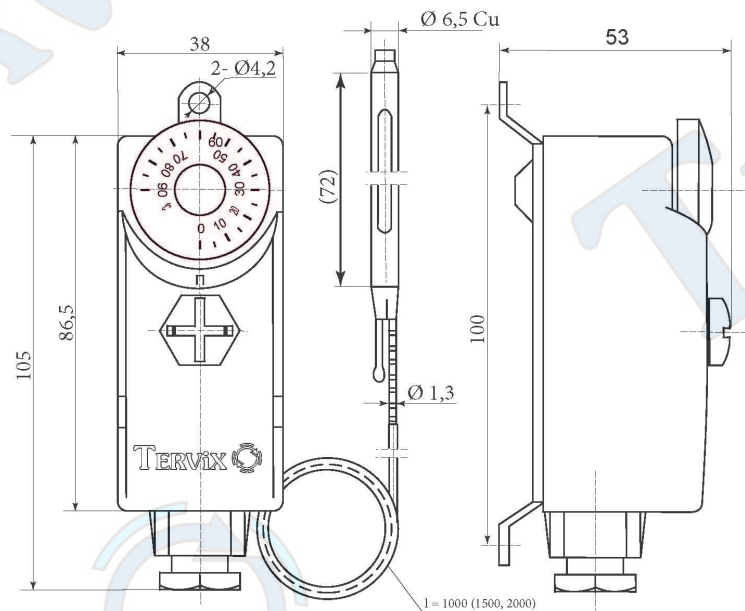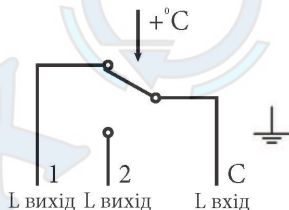Схема електричного підключення**Електричне підключення**

Відкрийте термостат, знявши ручку з циферблатом (1) і відкрутіть пластиковий гвинт (2). Зніміть кришку корпусу. 4 клеми, які тепер видно, можуть бути підключені наступним чином:

- Клеми C і 1 (нормально відкритий)
Термостат відкривається при підвищенні температури і закривається при зниженні температури. (Наприклад, функція - «Нагріву»)
- Клеми C і 2 (нормально закритий)
Термостат закривається при підвищенні температури і відкривається при зниженні температури. (Наприклад, функція - «Охолодження»)
- Клема — - заземлення

Установка має виконуватися тільки професійними монтажниками відповідно до схеми підключення та з дотриманням вимог техніки безпеки